

# Delta MONO/STEREO – Firmware Update Instructions **CLASSÉ**

## UPDATE VIA USB KEY

### Step 1. Download & Extract the Firmware ZIP Archive to a USB Key

- Download the ZIP archive containing the Firmware package from the Classé Website to your local computer.
- Extract the firmware package contents to an empty USB key (formatted in FAT32 or EXFAT).
- A folder named “DLT3\_AMP” along with other files should be created at the root level of the USB key.

### Step 2. Update Firmware using the USB Key

- Switch the Delta amplifier into standby mode and, then unplug the AC cord.
- Insert the USB Stick into the USB Slot located on the rear panel.
- Plug the AC cord back into the Delta amplifier.
- The Firmware Transfer and Firmware Update will begin automatically.
- A full Firmware Update may take up to 60 seconds.
- In the meantime, DO NOT unplug or turn off the Delta amplifier.

## UPDATE VIA DELTA PRE'S WEB INTERFACE

### Step 1. Download & Extract the Firmware ZIP Archive to a Computer

- Download the ZIP archive containing the Firmware package from the Classé Website to your local computer.
- Extract the firmware package to an accessible location on your computer.
- A firmware package file ending in “.bwu” is the file to be used for this method.

### Step 2. Update Firmware using the Delta PRE web interface

- Power on the Delta amplifier.
- Log onto Delta amplifier web interface by opening a web browser and typing in <http://xxx.xxx.xxx.xxx> in the URL bar (where xxx.xxx.xxx.xxx is the IP address of the Delta amp). The IP address can be found using your network router or by using a network device browser app such as Fing.
- Click on the *Firmware* tab.
- Follow the instructions on the screen.
- A full Firmware Update may take up to 2 minutes.
- In the meantime, do not unplug the Delta amplifier.

### Delta Amp Firmware Update explained in detail

At the start of the update, the Standby Button LED will commence “blinking blue”.

During the Firmware Update, however, there may be periods during which this LED will not be flashing at all or a quick transition to red. This occurs when the different devices are being updated in the amplifier.

A full Firmware update ends once the Standby Button LED shows solid red for at least 10 seconds.

If conducted with a USB Key, you can now remove the USB key, the Delta amplifier is ready for use.

